

ChargingCable

1	for / für BLACKBERRY	8220 Pearl Flip, 8520 Curve, 9300, 8900 Curve, 9500 Storm, 9520 Storm2, 9530 Storm	0-04-25-0033-0
	for / für Sony Ericsson	Vivaz, XPERIA X2, XPERIA X8, XPERIA X10, XPERIA X10 mini, XPERIA X10 mini pro	
	for / für Samsung		
	for / für Palm	Vodafone 360 H1, i8910 Omnia HD	
	for / für HTC	Pre Legend	
2	for / für BLACKBERRY	7100g, 7100v, 7100t, 7290, 8100 Pearl, 8120 Pearl, 8300 Curve, 8310 Curve, 8700c, 8700g, 8707v, 8800, 9000 Bold	0-04-25-0004-0
	for / für NOKIA	8800	
3	for / für Sony Ericsson	XPERIA X1	
	for / für HP	iPAQ 514 Voice Messenger, H6340, iPAQ HW 6510, iPAQ HW 6515, iPAQ HW 6915	0-04-25-0015-0
4	for / für HTC	SPV C-500, SPV C-600, SPV C-700, Qtek 8010	0-04-25-0016-0
	for / für HTC	4550 Kaiser, Hermes, Magic, MTeor, T-Mobile G1, Tattoo, Touch, Touch2, Touch 3G, Touch Cruise, Touch Diamond, Touch DIAMOND 2, Touch Dual, Touch HD, Touch Pro, Touch Pro 2, TyTN, MDA Compact, MDA Compact II, MDA Compact III, MDA IV, SDA I, SDA II, SDA Music, VPA Compact GPS, SPV M-500, SPV M-5000, Qtek 8020, Qtek8310, Qtek9100, Qtek S100, X-Phone II, I-mate JAM, I-mate SP3i	0-04-25-0013-0
5	for / für TOSHIBA	G500	
	for / für MOTOROLA	RAZR2 V8, RAZR2 V9	0-04-25-0031-0
7	for / für MOTOROLA	C390, E770v, KRZR K1, KRZR K1 m, RIZR Z3, RIZR Z8, L2 (v270), L6 (v280), L7, RAZR V3x, RAZR V3xx, W510 (PEMBA)	0-04-25-0021-0
	for / für NOKIA	5630XP, 6500c, 7900 Prism; E52, E55, N85, N86 8 MP, N97, N97 mini, N900	0-04-25-0030-0
8	for / für MOTOROLA	Milestone	
	for / für SAMSUNG	i9000 Galaxy S, S7220, I9100 Galaxy SII	
	for / für LG	BL20 New Chocolate, BL40 New Chocolate, GD900 Crystal, GM750, GT500	
	for / für BLACKBERRY	9700 Bold	
	for / für HTC	HD mini, HD2	
9	for / für NOKIA	2323c, 2330c, 3109c, 3120c, 3250, 3710fold, 3720c, 5200, 5230, 5300, 5310XM, 5500, 5530 XM, 5700, 5800XM, 6103, 6110 Navi, 6120c, 6124c, 6125, 6131, 6210 Navi, 6220c, 6233, 6234, 6270, 6280, 6288, 6300, 6300i, 6301, 6303c, 6303i c, 6600i Slide, 6650 fold, 6700c, 6710 Navi, 6720c, 6760 slide, 7370, 8600 Luna, C3-00, C5, C7-00, E5-00, E50, E51, E61, E61i, E 65, E66, E71, E72, E75, E90, N70, N71, N73, N76, N78, N79, N80, N82, N90, N91, N93, N93i, N95, N95 3G, N95 (8GB), N96, X3, X6	0-04-25-0022-0
	for / für NOKIA	6630 (10cm)	0-04-25-0007-0
11	for / für NOKIA	3230, 3650, 6021, 6230, 6230i, 6310, 6310i, 6600, 6680, 6681, 6810, 6820, 6820a, 6822, 7380, 7710, 8801, 8910, 9300, 9300i, 9500, E60, E70, N-GAGE	0-04-25-0001-0
	for / für SAMSUNG	SHG-E720, SGH-F300, SGH-P900, SHG-U600, SGH-U700v, SGH-i600	0-04-25-0027-0
13	for / für SONY-ERICSSON	C510, C702, C902, C903, C905, D750i, G502, G900, J105i Naite, K510i, K530i, K550i, K600i, K610i, K700i, K750i, K770i, K800i, K810i, M600i, P1i, P800i, P910i, P990i, S312, S500i, T650i, W205, W395, W580i, W595i, W600i, W610i, W660i, W700i, W705, W715, W800i, W810i, W850i, W880i, W900i, W910i, W950i, W960i, W995, V630i, Yari, Z520i, Z530i, Z610i	0-04-25-0018-0
	for / für SONY-ERICSSON	R520m, S700i, T39m, T68m, T68i, T610, T616, T630, V800, Z600, Z1010	0-04-25-0002-0
15	for / für TOSHIBA	TS 921	0-04-25-0006-0